Z902 MINI PC STICK for Android[™]



USER MANUAL

Table of Contents

Intr	oduction:	2
1.	Connectors	3
2.	Device Connection Instructions	4
3.	Boot Up	4
4.	Main Interface Introduction	6
	4.1 Function column	8
	4.2 status bar	8
	4.3 application	9
5.	Settings	10
	5.1 WIFI Setting	10
	5.2 Wired Network Setup	11
	5.3 PPPOE Settings	11
	5.4 Sound	11
	5.5 Display	11
	5.6 Storage	12
	5.7 Apps	12
	5.8 Security	12
	5.9 Language & Input	12
	5.10 Backup & Reset	12
	5.11 Date & Time	12
	5.12 Developer Options	12
	5.13 About Device	13
6.	Download & Install Apps	13
	6.1 Delete Apps	13
7.	Web Browsing	14
8.	Local Playback	14
	8.1 Music	15
9.	Use Virtual Keyboard	15
10.	Switch Input Methods	16
Que	estion & Answers	16
Spe	cifications	17

Introduction:

- This user manual includes all the information for safe and correct operation. To avoid accidents or damaging the device, please go through all the contents of the manual carefully before using the device.
- Please keep the device away from high temperature, humid or dusty environments.
- Do not drop or smash the device.
- Do not cut off the device when it is formatting, or upgrading, otherwise it could cause a system error.
- Do not dismantle the device. Do not clean it with alcohol, thinner or benzene.
- We reserve the right to upgrade or modify the device.
- Disclaimer: We only take the responsibility for providing a warranty and aftersales service. Users have to take care of their own data in the device by themselves. We are NOT responsible for any data or related lost.
- The device is not water-proof.
- All the pictures in this user manual are only for reference and are subject to change anytime.

1. Connectors



Micro-USB Power: 5V 1A Power.

USB 2.0 HOST & Micro USB: Connecting with USB device; or data transfer with computer.

T-Flash: Supports expanded 2GB-32GB TF card.

Recover: Firmware recovery button.

LED: Power light.

HDMI: High Definition Multimedia Interface Output.

2. Device Connection Instructions

- Take out the Z902 device and insert into your TV HDMI port (if there is not enough space around your TV's HDMI port for the Z902, please use the HDMI adapter cable), setup the TV data receive mode to the relevant HDMI port (Refer to the TV's user manual).
- b) Power supply connection: take out the Micro USB cable and connect it to the devices Mirco USB2 port, then connect USB2 to the TV's USB port (note: if there is no USB2.0 port in your TV or you need connect an external HDD box, please connect using its own power adapter directly)
- c) We suggest using a 2.4G wireless keyboard or mouse. Plug a 2.4G receiver on one of the USB Host connectors. Or plug in using a USB port converter. If only a mouse is plugged in, the device will provide a soft keyboard for system operation. If the device detects a physical keyboard, the soft keyboard will be hidden by the OS automatically.
- d) Mouse left button for "ok", right button for "return", rolling for page up and page down, Hold left button to pull icon or copy & paste file. Hold middle button for "properties".

3. Booting Up

After connecting with a USB power cable for around 10 seconds, the boot screen will appear.







After about one minute, you will gain access to the main screen;



4. Main interface introduction

Keep pressing any icon of the main menu, you can drag it anywhere as you like, you can also use the same method to drag any app shortcut to the main screen.



Drag the icon to the right corner "x" for deleting.



Move your cursor to any space and drag towards left or right for page rolling.

You can also use the mouse wheel for rolling page.



4.1 Function column



4.2 Status bar

The right bottom corner is the status bar. It shows the status of T-Flash Card, USB connection, Time, Wifi and Download etc.



Click status bar, the hide menu will pop up.



4.3 Application

Click

•

to show up all the installed program and the setup tools icon.

APPS	WIDGETS					ы внор	
		0		×		N	
Browser	Downloads	Email	FileManage	Flash Playe	Gallery	Gmail	
			8	0 0			13
Music	Play Store	PPTV	Search	Settings			
U ĝ	d) (⇔						14:39=

- If there are more than one page of app icons, you can drag cursor towards the left or right and the page will roll to show all the apps.
- You could launch these programs directly, or drag them to anywhere of the main screen if you want.



Click "APPS" or "WIDGETS" Bookmark Bookmark to access, keep pressing those apps or widgets and drag them to make them a shortcut on the desktop.

APPS	WIDGETS				Ĝ	SHOP
Bookmark		Bookmarks	Email		Gmail	
×		Google 2 Google 2 Google 2 Google 2 Google 3 Goo	The second secon	13.37pm and dying (a) base entropy	Index anternet elegenet ceret Angle Byseke types parts the state and the types parts the state of the types and the state of the types and types and types NetWerdy Cables Howard and NetWerdy	to Marrian Vie.
Google Set	arch 3×1 ,∙	Music	Music playlist		Picture frame	
Ŷ	۵)	U :				

5. Settings

In the setting menu users can setup according to their own requirements, such as network connection, language, input methods, video output resolution, sound output and check storage space.



The second se			
WIRELESS & NETWORKS			
🗢 Wi-Fi	Wi-Fi		
More			
DEVICE	Zerodevices Connected	-	
H Sound	zero OF2		
Display	Secured with WPA/WPA2 (protected network available)	₹.	
Storage			
Apps			
PERSONAL			
C Accounts & sync			
Location services			
Security			
Language & input			
		14:48	

5.1 WIFI Setting

When opened the device will search available wireless router signals within 30 meters, users just choose a

router and input the correct password after a short while you will be connected to the internet; if the router has no password, the device will connect to it automatically.

5.2 Wired Network Setup

If there is no wireless and you have to use cable to access the internet. Beforehand you have to buy a USB2.0 LAN Adapter and plug it to one of your USB ports. (Note: Network support is limited, please refer to the adapter manual)

Settings		
WIRELESS & NETWORKS		
♥ Wi-Fi	Ethernet	
More	Ethemet	
DEVICE	PPPOE Settings	

Connect RJ45 LAN Cable, click "Setting" → "More" → "Ethernet" → tick "Use Ethernet"

5.3 PPPOE Settings

If your family or office network needs dial-up, then click PPPOE Settings and input account and password. Connect RJ45 LAN Cable, Click "Setting \rightarrow "More" \rightarrow "PPPOE Settings" \rightarrow input account and password.

5.4 Sound

Volume: Click to setup volume level for music, video and games or other media.
Click sounds: Click to open or close click sounds.
Screen lock sound: Click to open or close screen lock sound.
Audio output mode: This option allows users to choose HDMI or SPDIF audio output mode.

5.5 Display

Brightness: Click to setup screen brightness level.
Contrast: Click to setup screen color display contrast.
Saturation: Click to setup screen color display saturation.
Wallpaper: Click to change the wallpaper according to user preference.
Font size: Click to setup system font size according to user preference.

Screen adaption: Click to adjust some games display size.

Screen trimming: Click to adjust the size of Screen

Display output mode: Click this option user should choose appropriate output resolution

5.6 Storage

In this option, users can view local storage space and external storage space, also users can uninstall or format storage equipment.

5.7 Apps

In this option, users can view installed and running apps, and at same time can check apps properties.

5.8 Security

Users can set a password according to their needs.

5.9 Language & Input

Language: Users can setup system menu language according to their country or preference (currently supports 60 languages)

Input: System default supports Chinese and English, users need manual installing for other input methods. Users can setup the keyboard and mouse cursor speed and simulation mouse step length.

5.10 Backup & Reset

Backup: When you have important files or apps, you better choose backup in case the files get lost. **Reset:** When you choose this option, and confirm, the system will erase user's settings and all the apps missing, and apply default configuration immediately (NOT SUGGESTED UNLESS NEEDED).

5.11 Date & Time

Because the machine does not have a built-in battery, manually set date and time can't be saved, users can use automatic date & time, so when the device is connected to the internet, the date and time will update automatically.

5.12 Developer Options

USB debugging: When connected to a PC, exchange of developer data needs open this option.

5.13 About device

This option shows all current system information.

6. Download & Install Apps

For apps to be downloaded from internet, the extension must be .apk, to be recognized. Users have two methods to install apps:

- 1. Download apps from android market or Google market, after download complete, then follow tips you will finish installation.
- 2. Also you can use a USB drive to install apps. First, connect the USB drive to the device, then open the USB drive and choose the app you want to install. After selecting the correct app, just follow the on screen tips to finish the installation.

Notice: if the apk apps is not from Google market, the system will regard it as not safe, users need to manually set to allow unknown sources in system settings \rightarrow security \rightarrow unknown source, then tick the box;

6.1 Delete Apps

- a. Access to Settings \rightarrow Apps \rightarrow Manager application, then you can see the installed apps list.
- b. Click on the app icon you need delete, delete dialog box will pop up.
- c. Click "Uninstall", then the app delete is completed.

Settings		
WIRELESS & NETWORKS	Documents To Go	
♥ Wi-Fi		Uninstall
🕓 Data usage	STORAGE	
More	Total	10.12MB
DEVICE	Арр 🔈	10.12MB
ብ ୬ Sound	USB storage app	0.00B
🏟 Display	Data	0.00B
Storage	SD card	0.00B
Battery		Move to SD card
	CACHE	
🖄 Apps	Cache	0.00B
PERSONAL		
\mathcal{C} Accounts & sync		
Location services		
		🕴 🖗 🖪 🖩 11:36

7. Web browsing

When connected to the Internet, you could use the default android browser, or install any other browser.



Based on users browsing habits, the start page will show your most common websites. Input the web address to show the website. In upper left corner of the screen you will see tabs, you can click "+" add a new webpage, or click "-" to close a opened webpage.

8. Local Playback

Users can use a file manager program to browse external TF card, USB flash drive and HDD box and then playback music, video, picture and files.

equipment	🛞 video	picture	🎵 music	file
	0	Local Memory		
		Sd card		
	•4•	Usb		
	<u>.</u>	Network Neighborhood		
Target :Local Memory Used size :48.00 Kb Avail size :1.81 Gb				
directory:equipment/Local Me रिके कि निवास) ब	mory ஸ் ப்	1	ţ	1/4 18:45 🗟

8.1 Music

Click "Settings" → "Music"

The device can play local video, but will need to install a player first.

9. Use virtual keyboard

If only a mouse is detected by the device a soft keyboard will appear, if the devices detects you have connected a physical keyboard, the soft keyboard will be hidden.

about:blank	× +			I
$\leftrightarrow \rightarrow c$	۹ about:blank	×	Ţ	X

	q \	w	e	r 1	t y	y l	i I	C	р
	а	S	d	f	g	h	j	k	
•	Ŷ	Z	X	С	V	b	n	m	DEL
	英文		?123	/		L	•		去往
	$\dot{\Box}$							÷ 🛛 🕷	1:16 🕫

10. Switch Input methods

When you click any input box, you can setup your preference input methods, please click desktop keyboard icon at the right-bottom status bar



All the installed methods will display as below picture, and you can choose one you prefer:

English (US) Android keyboard	<u>+</u> +
• 🎋 谷歌拼音输入法	<u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u><u></u></u>
设置输入法	
👾 Ý 🖗 🐱 🛱 🗍 : -	1971

Question & Answer

- Screen flicker or unstable working: please check if the HDMI cable has been connected tightly.
- Can not start device: please download recovery SW from <u>www.Zero-Devices.com</u> to refresh the device OS.
 Make sure all the important data has been backed up before processing the recovery SW. If the issue still can not be solved, please contact the distributor that you bought from.
- Keep restarting system automatically: please check if the device is getting enough power supply. Sometimes, external HDD cause power shortage. Please plug an additional power supply for external HDD or other external devices.
- Can not find file in SD card or open drive: Please check all the connectors in the device. And make sure you have ticked SD and USB Host in "Setting"

Specifications

Model	Z902
OS	Android 4.0
Main Chip	Allwinner A10 / 1.5 GHz Cortex-A8
Memory	1GB
Storage	4GB
Graphical processor	2D / 3D / OpenGL ES2.0 (AMD Z430) / OpenVG1.1 (AMD Z160)@27M Tri / sec
Network	Wireless 802.11b/g/n, WAPI (Ralink 8188)
Expand Memory	Micro TF 2-32GB
IO/Ports	2 x Micro USB, 1 x USB2.0, 1 x HDMI, 1 x MicroSD
Keyboard	Support virtual keyboard, support 2.4G wireless keyboard, fly mouse, USB devices
Audio	AAC, AAC+, eAAC+, AMR-NB, AMR-WB, QCP, MP3, WMA, WAV, MIDI, M4A
Video	WMV / ASF / MP4 / 3GP / 3G2M4V / AVI / MJPEG / RV10 / DivX / VC-1 / MPEG-2 / MPEG-4 / H.263 / H.264 / 1280x720P HD 30 fps, 1080P / 720x480 D1 30fps
Android APP	Youtube, Twitter, Angry Birds, Office, Gmail, Browse, Skype.
HDMI	1080P&2160P
Power Input	Powered by USB cable
Accessories	Micro USB to USB (male) cable, Micro USB to USB (female) adapter, HDMI female to male cable
Unit Size	9.7x2.8x1.2cm
Total weight	0.25 kg

REMEMBER REGISTER YOUR ORIGINAL ZERO DEVICES AT

www.zero-devices.com with your Authenticity card